


Quick Installation Guide of GPRS Module

1. Product Appearance

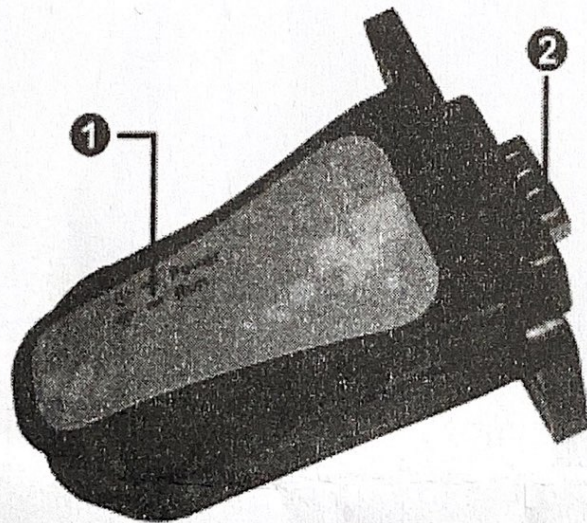

① Status light ② DB9 serial port

Status Light:

Power supply LED (Red)	ON	Normal
	OFF	Abnormal
Status LED (Green)	Flicker	Normal
	Always ON	Fail to connect with the data server
	OFF	Fail to communicate with the device successfully